



 **Three Cuts®**  
FOR IMPORT & EXPORT CUTTING SYSTEMS MACHINES

**ماكينة تناية حروف**

## OUR PARTNER



## CERTIFICATIONS





## OUR CLIENT



## OUR EXPO





# ماكينة تناية حروف

## طبيعة عمل الماكينة:

تستخدم الماكينة في عمل جميع اشكال الحروف و الارقام بكل اللغات و تقوم بعمل اللوجوهات و جميع الرسومات و الاشكال و يتوفر من ماكينة الثني عدة موديلات و تعمل على خامات مثل الصاج - الاستانلس - الالومنيوم

## مجالات تشغيل الماكينة:

الدعايا والاعلان - تشكيل الصاج و الاستانلس و الالومنيوم

The origin of the clip: It takes effect when the device is initialized, which affects the reset position of the feed clip. The status of the "control card 0" io port "8" when the baffle passes the sensor is green, and the status of the io port without the baffle passing sensor is gray.



Positive feed limit: It is effective when measuring the maximum travel of the feed, and the maximum travel value of film and television feed. When the flap is close to the sensor, the status of the corresponding "control card 0", io port "7" is green, and the status of the flap away from the sensor io port is gray.




Feed in place: The feed click is effective when the servo motor is in normal state. When the state of the motor is normal, "feed in place" corresponds to "control card 0", "io port" "24" status is green.






Milling cutter origin: It becomes effective when the milling cutter rotates and resets. The blade contact sensor corresponds to the "control card 1" io port "31" status is green. Without the blade contact sensor, the io port status is gray.

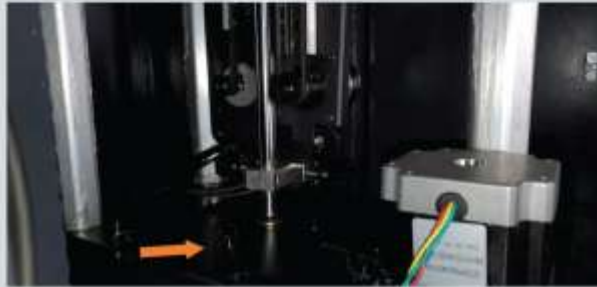


Mill cutter rotation alarm: When the cutter rotation reset action is abnormal, the state corresponding to "control card 1" io port "27" is red.

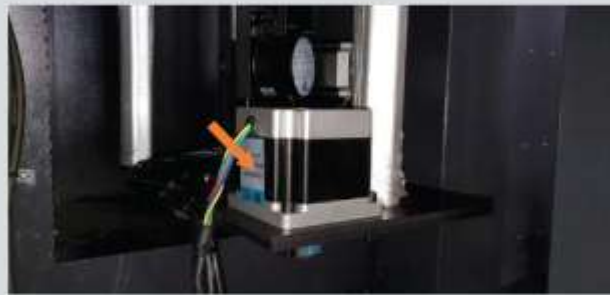

The origin of the depth of the planer: It takes effect when the slotting depth is reset, which affects the slotting depth. When the baffle passes the sensor, the status of the "control card 0" io port "14" is green, and the status of the baffle passing sensor io port is gray.



The origin of the slotting of the planer: It takes effect when the slotting head is reset, which affects the slotting stroke distance. When the flap passes the sensor, the status of the corresponding "control card 0" io port "20" is green, and no flap passes the sensor io port status It is gray.

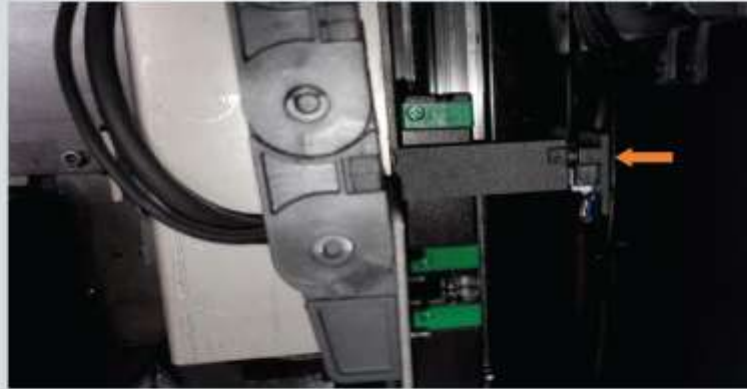

Bending in place: It takes effect when the bending motor is a servo motor. When the state of the motor is normal, the "bending in place" corresponding to "control card 0" and "io port" 22 "status is green.



Scimitar 1 raised: it takes effect when the scimitar 1 is raised, and detects the scimitar position. The state of the scimitar raised corresponding to the "control card 1" io port "4" is green, and the state of the scimitar dropped corresponding to the io port is gray .



## SPECIFICATIONS

|                      |                                |
|----------------------|--------------------------------|
| مواتير               | يوجد ٥ مواتير ٣ سرفو و ٤ استبر |
| الخامات<br>المستخدمة | استايلس وصاج والومنيوم         |
| السلح                | الماني                         |
| الشريط               | اقصى ارتفاع للحرف ٢٠ سم        |
| اقصى طول<br>للحرف    | طول الحرف مفتوح                |
| كهرباء               | 220v                           |
|                      |                                |



# FINANCIAL OFFER

|                    |  |  |
|--------------------|--|--|
| Total Price        |  |  |
| Terms & Condetions |  |  |



THANK YOU



## CONTACT US:



01002000135



[www.threecuts.net](http://www.threecuts.net)



Elserag Mall, makram Eubeed  
Nasr city, Cairo

